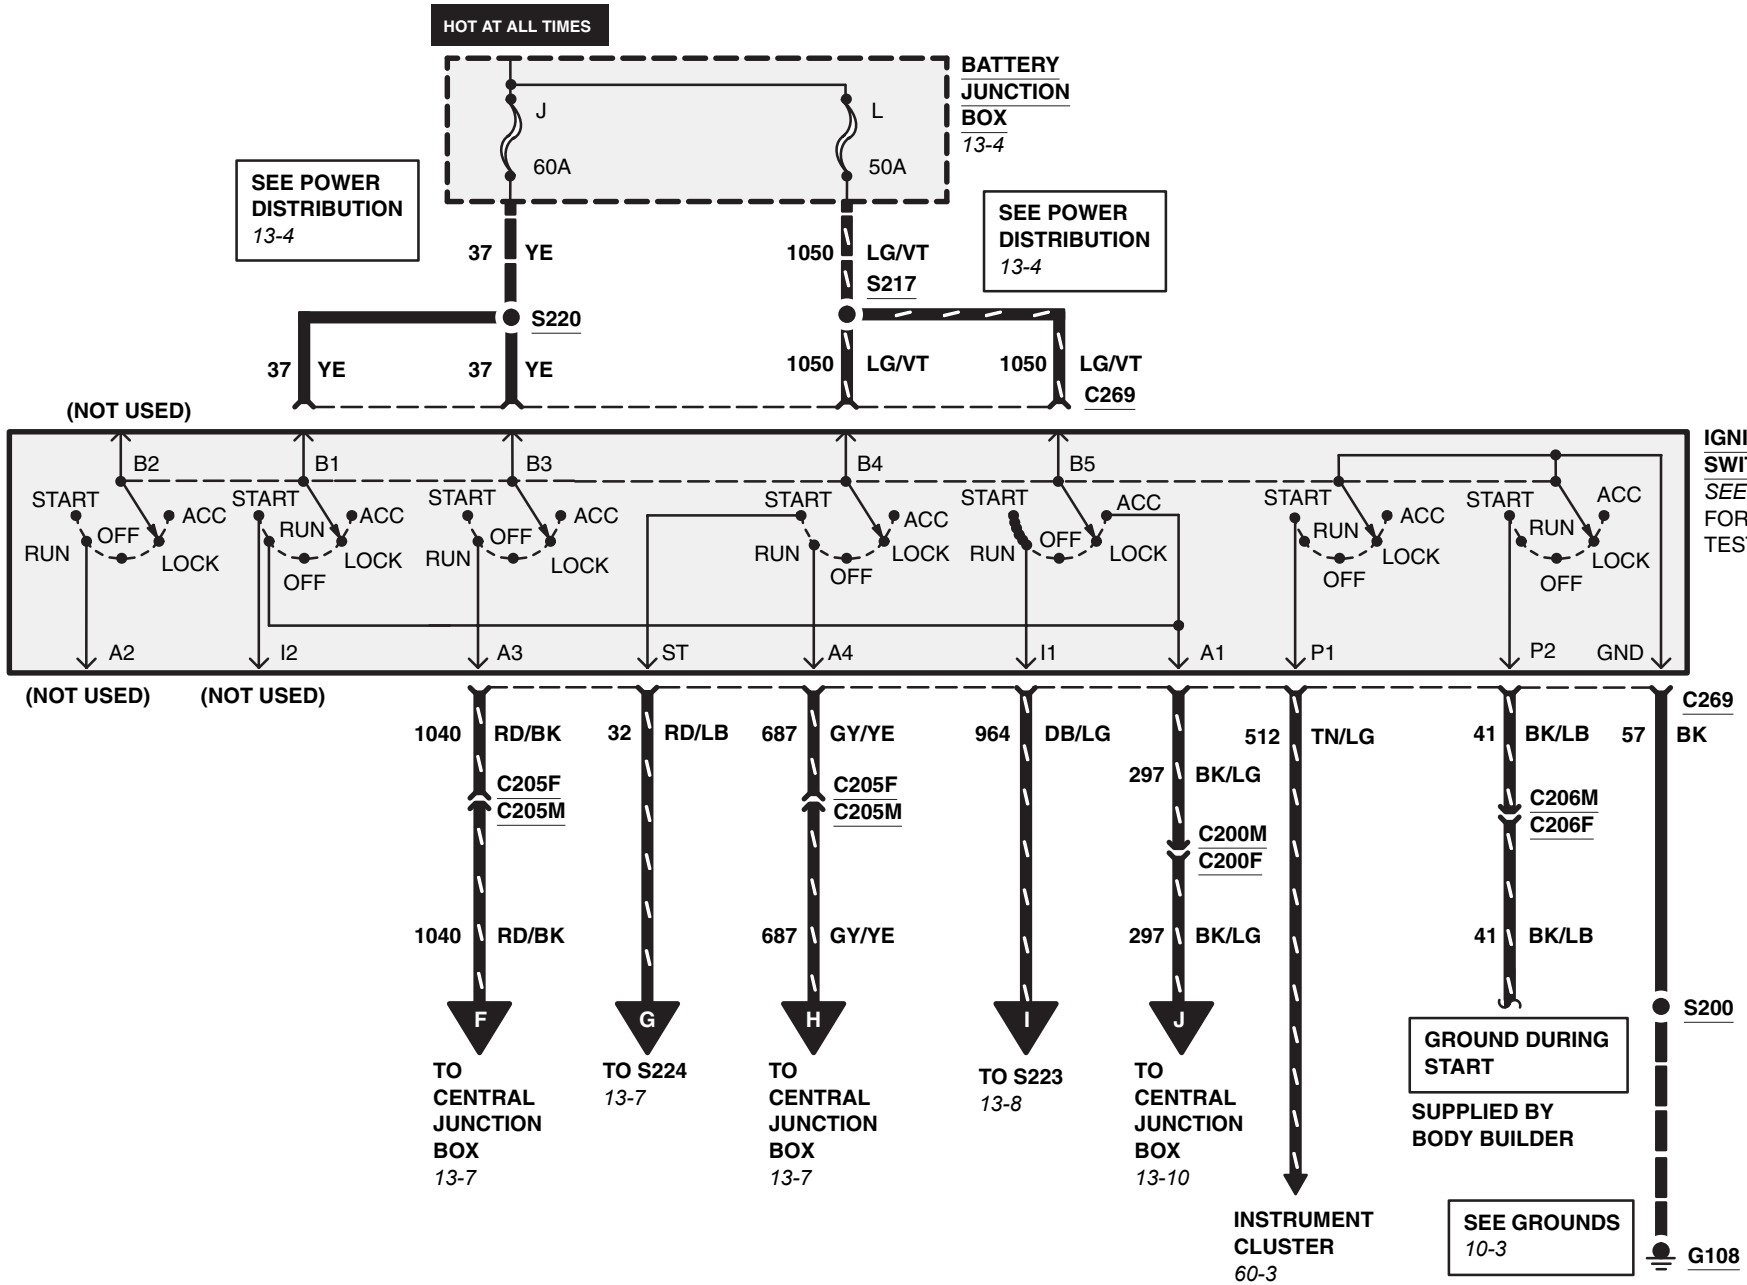
HOT AT ALL TIMES
BATTERY JUNCTION BOX
13-4
J
60A
L
50A
SEE POWER DISTRIBUTION
13-4
SEE POWER DISTRIBUTION
13-4
37 YE
1050 LG/VT
S217
S220
37 YE
37 YE
1050 LG/VT
1050 LG/VT
C269
(NOT USED)
IGNITION SWITCH
SEE 149-6
FOR SWITCH TESTING
B2
B1
B3
B4
B5
START
RUN
OFF
ACC
LOCK
A2
I2
A3
ST
A4
I1
A1
P1
P2
GND
(NOT USED)
(NOT USED)
1040 RD/BK
C205F
C205M
1040 RD/BK
32 RD/LB
687 GY/YE
C205F
C205M
687 GY/YE
964 DB/LG
297 BK/LG
C200M
C200F
297 BK/LG
512 TN/LG
41 BK/LB
C206M
C206F
41 BK/LB
57 BK
C269
S200
F
G
H
I
J
TO CENTRAL JUNCTION BOX
13-7
TO S224
13-7
TO CENTRAL JUNCTION BOX
13-7
TO S223
13-8
TO CENTRAL JUNCTION BOX
13-10
INSTRUMENT CLUSTER
60-3
GROUND DURING START
SUPPLIED BY BODY BUILDER
SEE GROUNDS
10-3
G108